

AC Connection with wallwart

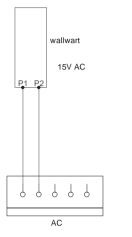

AC Connection with transformer

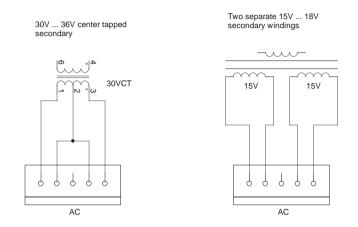

primary / mains voltage side not shown. Only work with mains voltage when you are qualified - then you know how to connect fuses, switches, earth GND etc. as well. If not, let some qualified person do it, or use a wall wart instead.

Mains Voltage can be lethal!!

(c) J. Haible 2009 - Errors excepted